
INSTALLING MODEM AND ANTENNAS INTO SHIVVERS PREMIER




MAKE SURE THE MAIN POWER IS DISCONNECTED AND LOCKED OFF! THIS MUST INCLUDE THE POWER TO THE FAN(S).

STEP 1. Locate the Premier Modem Assembly in the box marked 641AV-001A and 2 screws from the plastic bag. Install the Modem, as shown, into the Premier box. Plug in the Ethernet cable, as shown, into the E-NET spot on top of the Modem. $\#8 \times 3/8$ SHEET

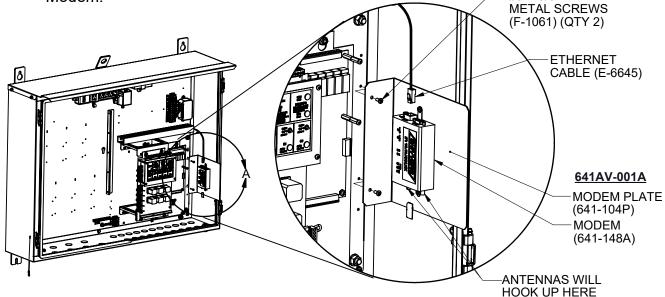

STEP 2. Slide the wire duct cover off. Route the power supply cord from the Modem through the wire duct and up to the power strip. Pull up any extra slack into the wire duct. Replace the wire duct cover.

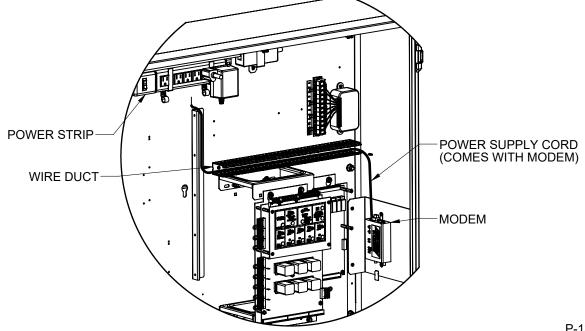

STEP 3. Remove a small knock-out plug from the bottom right of the Premier Box. Insert the black plastic cord grip in the open hole. Secure with the conduit lock nut provided.

STEP 4. Remove the plastic nut, then remove the compression sleeve from the plastic nut. Slide the 2 antenna cables (brass end) through the opening of the plastic nut and slide the compression sleeve over the 2 cables. Connect the nut back onto the cord grip but do not over tighten.

STEP 5. Fasten the antennas to the 2 ports on the Modem marked "CELL" and "AUX". The antennas have a magnetic base. Mount the antennas on top of the Premier box.

